



Equipment Specification

LANCHESTER

10 h.p. LD10, 1946-51

LANCHESTER

Unit	Year	Part No.	Unit	Year	Part No.	Unit	Year	Part No.
Battery	1946-51	SG9A	LAMPS, Head — <i>continued</i>			Switches — <i>continued</i>		
Coil, ignition	1946-51	45012A/D	Home, L.H. and R.H.	1946-48	*50211A	Heater or fan	1951	*78221A
Control box	1946-50	*37031A	Home, L.H. and R.H. (Saloon)	1946	50654A	Knob		768378
Distributor	1951	37057E	Home, L.H. and R.H.	1951	*50623A	Lighting and ignition	1946-51	*344890
Distributor	1946-47	*409929	Export, L.H. and R.H.	1948-51	50654A	Panel	1946-50	359350
Distributor	1948-51	40112A	Number plate	1946-47	53045B	Panel	1951	78235A
Generator	1946-51	22449A	Number plate	1948	53061A	Knob		768378
Generator	1951	22449D	Number plate	1951	53093E	Panel (Later)	1951	31113A
Horn			Side	1946-47	52057A	Knob		*316490
Low note	1946-50	*69021A	Side	1948	*52078A	Starting motor	1946-51	76428A
High note	1946-50	*69022A	Side	1951	52057A	Stop lamp	1946-51	31281B
Low note	1951	69011F	Stop tail	1951	53173B	Spring		315543
High note	1951	69012F	Mirror	1946-51	*62007A	Trafficators	1946-50	*54014D
Inspection lamp sockets	1946-51	301187	Starting motor	1946-51	*25000A/D	Trafficators	1951	*54041A
LAMPS			Steering column control	1946-51	32711B/E	Windshield wipers	1946-50	72542E
Fog	1951	55029E	Switches			Windshield wipers	1951	72618B
Head			Battery master	1951	76605B	Arm, wiper	1946-51	*735050
Home, L.H. and R.H.	1946	*50098A	Dipper	1946-51	31284A	Blade, wiper	1946-51	727707

* See Supersession Chart

NOTE:—Before ordering Steering Column Controls or Windshield Wipers refer to the respective detailed parts sections.